

RECORDERGEAR

MODEL
TR500

Landline Call Recorder


USER MANUAL



www.recordergear.com

RecorderGear™ and respective logos are trademarks of
Teton Webstores LLC ©2017 ALL RIGHTS RESERVED



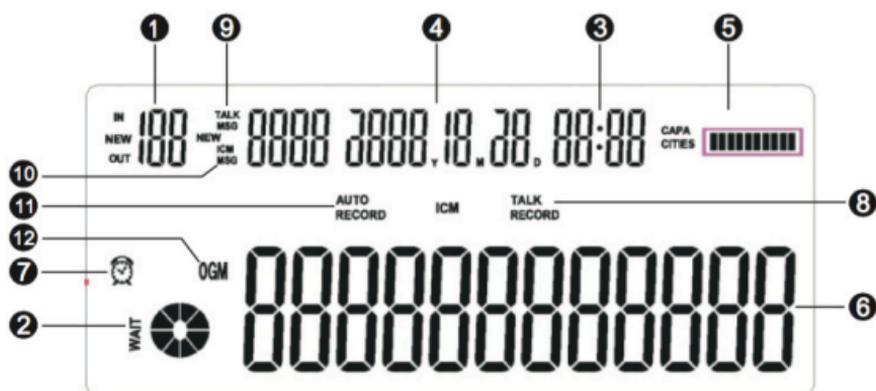

1 - REC & Voicemail Quantity

2 - SD Card Sync Status Bar

3 - Time Display

4 - Date Display

5 - SD Card Capacity

6 - Caller ID Display

7 - Alarm Clock Indicator

8 - Talk/Record Indicator

9 - Playback Indicator

10 - Voicemail Indicator

11 - Auto Record Indicator

12 - OGM Indicator



MID: DAR-4001

MADE IN CHINA

1 Year Warranty included with all RecorderGear™ brand products. See our website at www.recordergear.com for more details.

Table of Contents

1 Installation Instruction	5
2 Answering Machine Set-Up	6
3 Call Recorder Mode	7
4 Audio Recorder Mode	8
5 Alarm Clock Set-Up	9
6 Other Settings	10
7 Playback / Delete Files via the TR500	12
8 Playback / Locate / Delete Files via PC	14
9 Music Function	15
10 Specs	15

1 Installation Instruction

A. Using the phone cable provided, connect one end to your home/office telephone jack and the other end to 'port 1' of the TR500

B. Connect your telephone's cable to 'port 2' of the TR500

C. Insert a SD card into the SD card slot of the TR500

D. Power on the TR500 by connecting it to a power outlet using the adapter provided

E. Wait for the TR500 and the SD card to synchronize before any further operation

NOTE: Make sure the TR500 is powered off before you install or uninstall the SD card

2 Answering Machine Set-Up

This section will help you understand how to set up the answering machine function of the TR500

A. Ringer Count Set-Up

1. Make sure the TR500 has been installed correctly as described in section 1
2. While on the main screen, press and hold the "VOL/SET" button for 3 seconds
3. Press the "A.REC/UP" button four times for the "SET 5 RINGCN" option. This controls how many times the telephone will ring before transferring to the answering machine
4. Press the "VOL/SET" button to select the "SET 5 RINGCN" option
5. Use the "A.REC/UP" or "DOWN" button to choose between ringer 00 or 03 to 12. If 00 is selected it will send the caller straight to the answering machine and if 12 is selected the phone will ring 12 times before transferring to the answering machine
6. Press the "VOL/SET" button to return to the "SET 5 RINGCN" screen
7. Press the "MUSIC/DEL" button to exit

B. Greetings Set-Up

1. The TR500 comes with a default greeting message. To personalize it, press and hold the OGM button for 3 seconds, you will hear a beep indicating recording has begun
2. Record your new greeting. When done press the OGM button once to save it
3. Press the MUSIC/DEL button to exit

NOTE: Every time you make a new greeting it will replace your old one

3 Call Recorder Mode

This section will help you understand how to set up the call recorder function of the TR500

A. Manual Call Recording Mode

While making or receiving a call, you can manually start the recording process (this is the default mode). To record a call manually:

1. Press the "M.RECS/S.REC/PAUSE" button after you pick up the phone to make or receive a call
2. When the call is ended, It will stop recording

automatically and save the recording to the memory card

B. Auto Call Record Mode

This automatically starts recording every telephone call made or received. To activate auto call record:

1. Press and hold the "A.REC/UP" button for 3 seconds
2. Use the "A.REC/UP" button to turn on/off auto recording
3. Press the "MUSIC/DEL" button to exit

4 Audio Recorder Mode

This section will help you understand how to use the audio recorder function of the TR500. To use the TR500 as an audio recorder:

1. Press the "M.RECS/S.REC/PAUSE" button once
2. The TR500 will beep once and start recording audio
3. Press the "M.RECS/S.REC/PAUSE" button again to stop recording

5 Alarm Clock Set-Up

This section will help you understand how to use the alarm clock function of the TR500

A. Alarm Clock Setup

1. Press and hold the "VOL/SET" button for 3 seconds
2. Press the "A.REC/UP" button once for the "SET 2 Alert" option which controls the alarm clock
3. Press the "VOL/SET" button to select "SET 2 Alert" option
4. You can set up to 3 different alarms. Use the "A.REC/UP" or "DOWN" button to choose which alarm to edit
5. Press the "VOL/SET" button to select an alarm to edit. The on or off setting then begins to blink
6. Use the "A.REC/UP" or "DOWN" button to choose between on or off. Press "VOL/SET" to select your desired option
7. If you choose "on", use the "A.REC/UP" or "DOWN" button to choose an alarm time pressing the "VOL/SET" button to accept changes and move to the next option
8. Select a ring tone using the A.REC/UP and DOWN button to choose, pressing the "VOL/SET" button to save changes. If no other ring tone is

saved to the SD card, you will be promoted to record one

9. Press the "VOL/SET" button to return to the "SET 2 Alarm" screen

10. Press the "MUSIC/DEL" button to exit at any time

6 Other Settings

A. Time/Date Setting

1. Press and hold the "VOL/SET" button for 3 seconds

2. Press the "VOL/SET" button again to select "SET 1 date" option

3. At the top of the screen, the 'year' begins to blink

5. Use the "A.REC/UP" or "DOWN" button to select year

6. Press the "VOL/SET" button to accept changes and move to the 'month'

7. Repeat steps 5 and 6 above until you have successfully returned to the "SET 1 date" screen

8. Press the "MUSIC/DEL" button to exit at any time

B. LCD Brightness Setup

1. Press and hold the "VOL/SET" button for 3 seconds
2. Press the "A.REC/UP" button twice for the "SET 3 LCD" option
3. Press the "VOL/SET" button to select "SET 3 LCD" option
4. Use the "A.REC/UP" or "DOWN" button to increase or reduce LCD brightness and press the "VOL/SET" button to accept changes
6. Press the "MUSIC/DEL" button to exit at any time

C. Ringer Setup

1. Press and hold the "VOL/SET" button for 3 seconds
2. Press the "A.REC/UP" button three times for the "SET 4 RING" option which controls whether the TR500 rings out loud or not
3. Press the "VOL/SET" button to select the "SET 4 RING" option
4. Use the "A.REC/UP" or "DOWN" button to choose between ringer 1 or off
5. Press the "VOL/SET" button to select your desired option and return to the "SET 4 RING" screen
6. Press the "MUSIC/DEL" button to exit

D. Ringer Volume

1. Press the "VOL/SET" button once to enter the "RINGVOL" menu
2. Press the "VOL/SET" button again to increase volume or decrease volume.
3. Press the "MUSIC/DEL" button to exit at any time

7 Playback / Delete Files via the TR500

This section will help you understand where recordings are saved and how to access them

A. Playback Answering Machine (Telephone Messages)

When there is a new message the red indicator light will blink continuously

1. Press the MSG button once
2. The messages will start playing from the newest to the oldest
3. Press the "M.RECS/S.REC/PAUSE" button to pause or unpaue playback
4. Press the "DOWN" or "A.REC/UP" button to skip forward or backward respectively

5. Press the MSG button to exit

B. Playback Call/Audio Recording

1. Press the "PLAY" button once
2. The recordings will start playing from the newest to oldest
3. Press the "M.RECS/S.REC/PAUSE" button to pause or unpaue playback
4. Press the "DOWN" or "A.REC/UP" button to skip forward or backward respectively
5. Press the "PLAY" button to exit at any time

C. Delete Message/Audio Recording

1. Playback the message/audio you want to delete
2. Press the "MUSIC/DEL" button twice and wait until it is completed

D. Playback Volume

1. While on any playback option, press "VOL/SET"
2. Press the "VOL/SET" button to move volume up and down

8 Playback / Locate / Delete Files via PC

- A.** Power off the TR500 by disconnecting it from the power source
- B.** Eject the SD card
- C.** Insert the SD card into a PC via a card reader
- D.** Open files on desktop
- E.** Answering Machine Files are saved in the folder titled ICM
- F.** Call recording and audio recording files are saved in the folder titled TALK
- G.** Personalized Greeting is saved in the folder titled OGM
- H.** Personalized Alarm tone is saved in the folder titled ALARM

9 Music Function

For the music function to work, music files must have already being saved to the SD card

A. While in the main screen, press the MUSIC/DEL button and saved music files will start playing

B. Press A.REC/UP or DOWN to switch between music files

10 Specs

Memory	Up to 32GB Card
Audio Format	WAV
LCD Screen	Yes
External Speaker	Yes
Headphone Jack	Yes
Dimensions	145 x 90 x 41mm
Weight	5.8 oz

RECORDERGEAR

PROFESSIONAL GRADE SECURITY



MID: DAR-4001

1 Year Warranty included with all RecorderGear™ brand products. See our website at www.recordergear.com for more details.